



## TRACKER Caravan Operating Instructions

### Important Information - Please Retain For Future Reference

#### Product Overview

TRACKER Caravan is a dual security device combining alarm protection and stolen caravan recovery.

As a standard feature, the alarm system detects external caravan movement. Movement inside the caravan can be detected by a passive infrared sensor (PIR) if fitted. TRACKER Caravan is activated by external caravan movement (such as lifting and towing) over a longer period of time, not via the alarm's movement sensor or by the detection of internal movement by the PIR.

Should the alarm be non-operational at any point (e.g. as the result of a flat key fob battery), the tracking device will continue to operate but no alert will be given.

#### To 'arm' TRACKER Caravan:

- » Press the button on the key fob once and the siren will bleep twice
- » After 45 seconds the alarm system will arm
- » After a further five minute delay the TRACKER Caravan system will arm

#### To 'disarm' TRACKER Caravan:

- » Press the button on the key fob once
- » The siren will bleep once and the TRACKER Caravan system will disarm
- » If already sounding, the siren will be silenced

#### Key Fob / PIR Battery Information

The battery life of the key fob and PIR should be in excess of two years, however, this will vary greatly dependant on usage and storage temperature. Replacement batteries are commercially available.

# TRACKER Caravan Operating Instructions



## Operation

- » An audible alarm will be triggered if the caravan is towed, moved or lifted onto the back of a trailer. The alarm will sound for five minutes unless stopped by the user.
- » TRACKER Caravan's motion sensor detects movement and sends an alert to the TRACKER Control Room. On confirmation of the theft and receipt of your crime reference number, TRACKER will activate the unit allowing the police to track the caravan to its exact location.
- » The audible alarm can also be triggered by the PIR detecting a change in the heat pattern in its detection zone (e.g. people, animals, draughts). The PIR is permanently active as indicated by the periodic flashing of the red LED; however the audible alarm will only trigger if the system is armed. Please note: Owners of caravans where PIR systems are not fitted can contact their caravan dealer for more information and PIR installation.
- » In order to prevent false alarms, the PIR requires a settling period of one minute without movement before it is able to detect illegal movement.
- » TRACKER Caravan can have up to five key fobs. Additional key fobs may be ordered from your caravan dealer.

## Useful Tips

Before storing your caravan for an extended period, please observe the following precautions:

- » The TRACKER Caravan has its own security back-up battery that will be used for a short time if the leisure battery is disconnected. However, as with all electronic components, TRACKER Caravan relies on the leisure battery being connected at all times for normal use. If the back-up battery becomes flat and needs replacing, a chargeable service call will be required.
- » It is essential that before storing your caravan, the leisure battery is fully charged. Dependent on the age and battery's capacity, the leisure battery will need to be recharged at intervals between three and six months.

If you require additional information regarding your TRACKER Caravan system, please contact our Customer Helpline on:

**01895 455 777**

**TRACKER™**  
stolen caravan recovery